



Classic Garden Elements®

D & D S I N C E 1 9 9 8


Victorian Rose Arbour Instructions for Assembly and Maintenance

- 1. Place the two side panels symmetrically with the front side facing down on a flat surface.**
Tip: It's best to place the two side panels as described on several evenly sized wooden blocks to balance out any unevenness in the floor.
- 2. Attach the roof covering to the top of the arbor using the largest screws.**
Only tighten the screws lightly at this stage.
- 3. Carefully place the back panel onto the two side panels.**
Please make sure that the top of the back panel is inserted *underneath or into* the roof covering.
- 4. Attach the back panel to the side panels using the small screws.**
Tip: Start by inserting the screws at the top and bottom, then insert the middle screws. If necessary, use a clamp if the holes do not align exactly due to internal tension in the back panel or an uneven floor.
- 5. Now tighten the screws on the roof covering.**
- 6. You can now attach the two cast iron pinecone ornaments to the roof covering.**
They are fastened using the small screws already attached to the base of the ornaments.
Tip: The ornaments allow for a little adjustment space. Use this to visually compensate for any minor unevenness.
- 7. The arbor is now fully assembled and can be set up in its intended location.**
We recommend anchoring it with 8 ground anchors, at least 80 cm long, set in concrete. For particularly exposed locations, consult an expert! *Pay attention to local wind conditions!*
- 8. Do not climb on the arbor.**
In heavy snow, carefully clear the snow using a broom.
- 9. The arbor is galvanized and powder-coated in black.**
If the color coating gets damaged and the bare zinc becomes visible, spray the affected area with black matte zinc spray. You can get this spray where you purchased the arbor.



*Classic Garden
Elements®*

D & D SINCE 1998

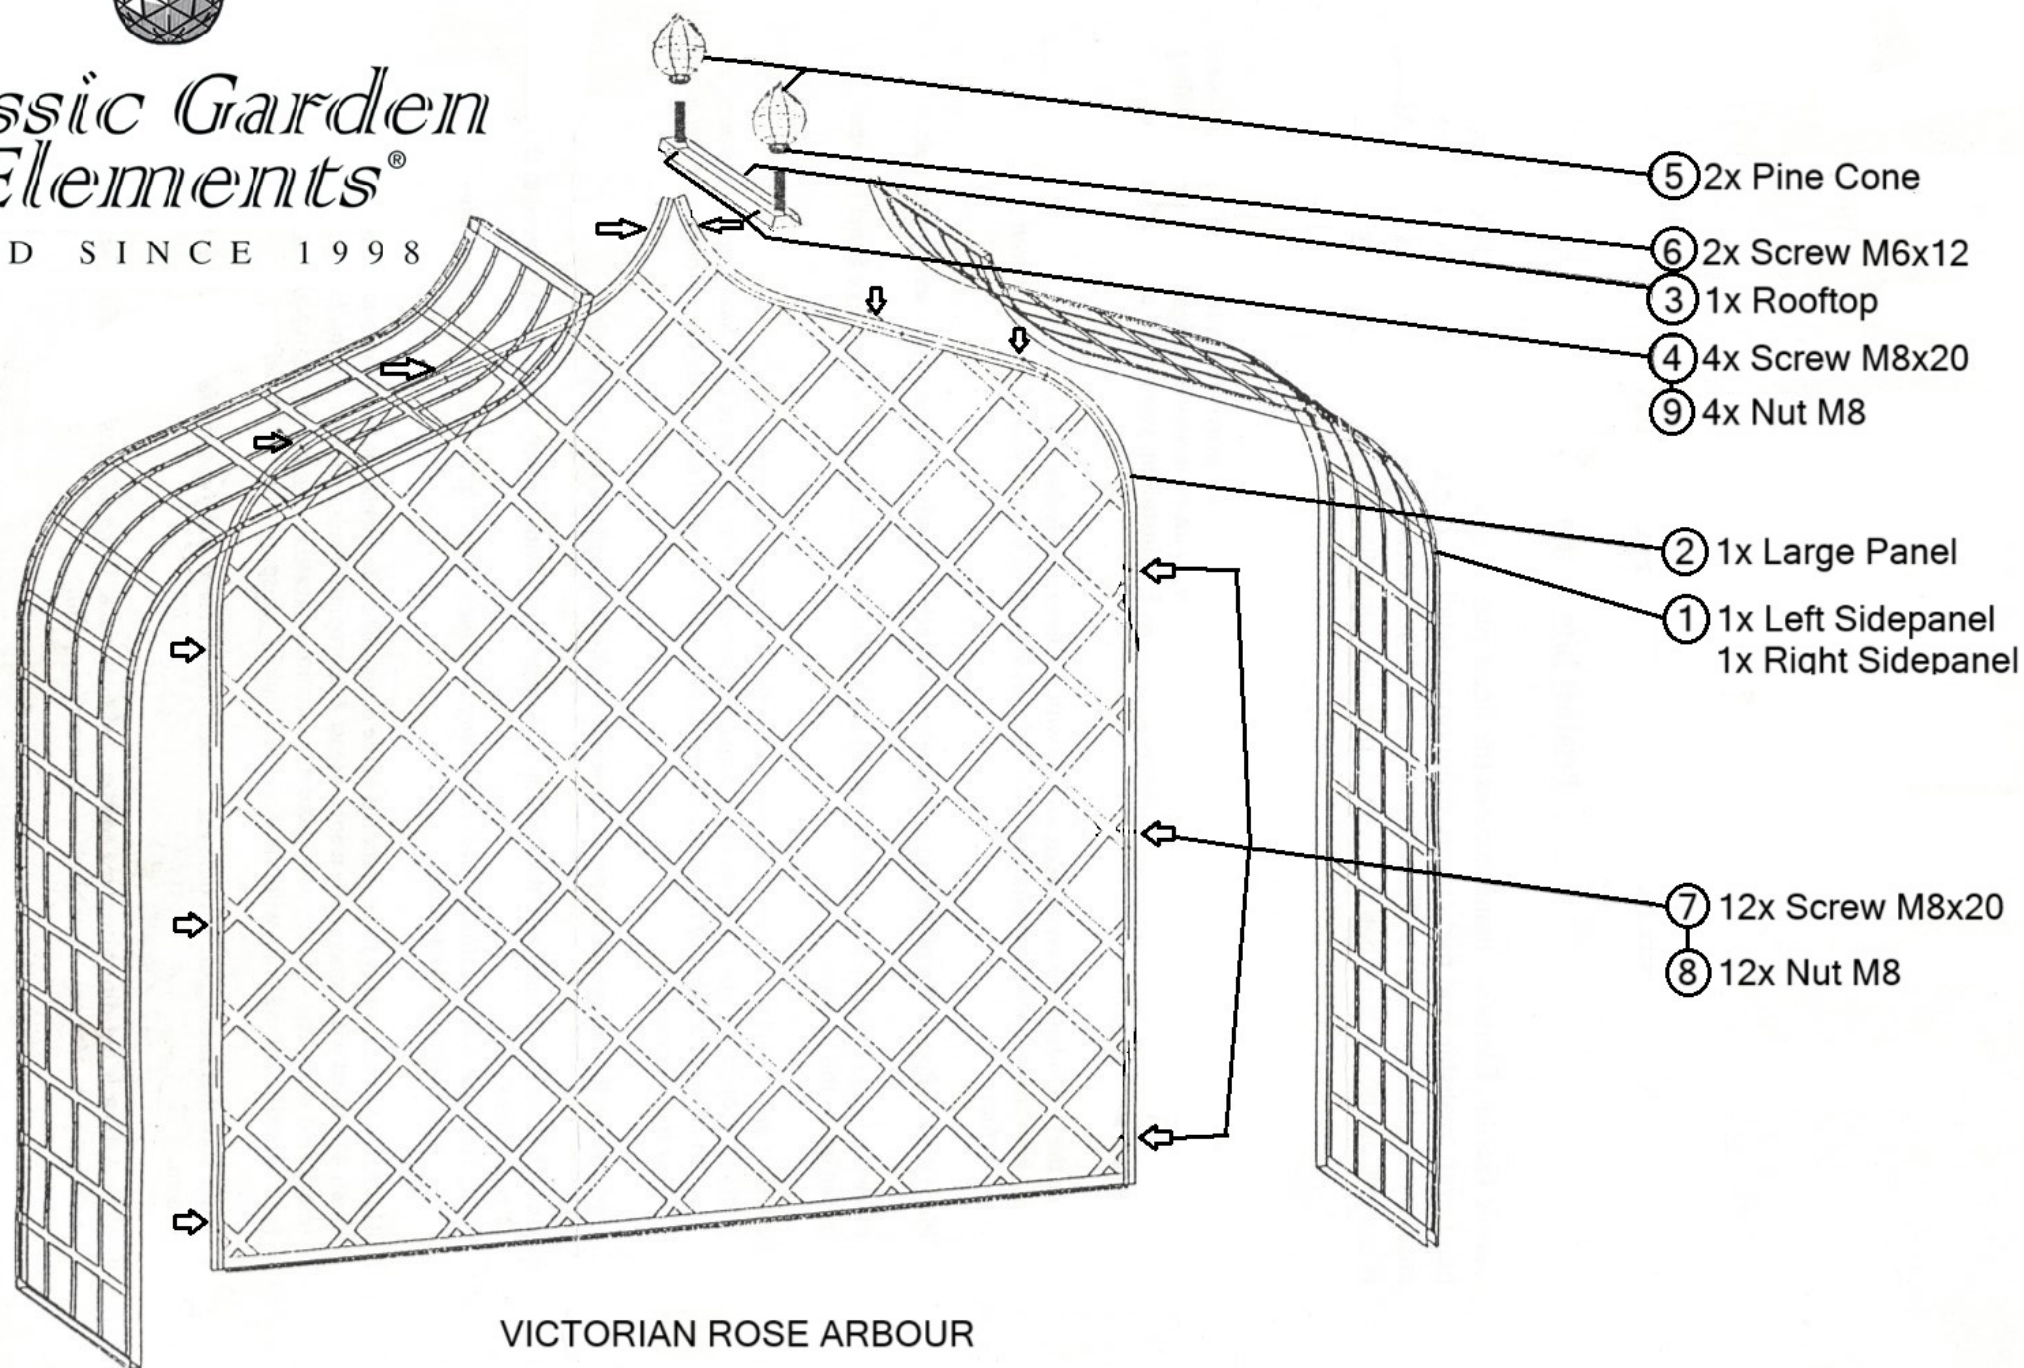

VICTORIAN ROSE ARBOUR